


# MINUTEMAN<sup>®</sup>


## Pro Series Rackmount

### Uninterruptible Power Supply

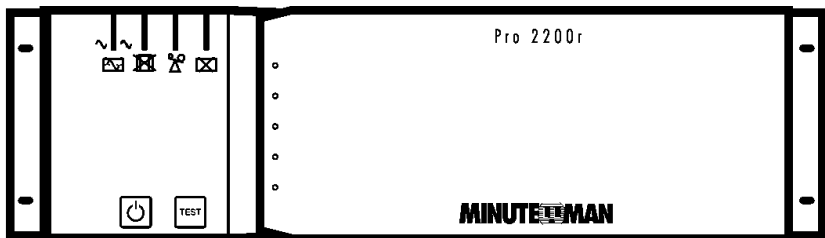

### User's Manual



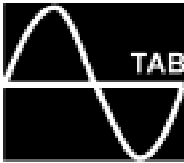

## **TABLE OF CONTENTS**

---

### **Pro Series User's Manual**

<b>1.</b>	<b>Introduction</b>	<b>2</b>
<b>2.</b>	<b>Controls and Indicators</b>	<b>4</b>
<b>3.</b>	<b>Installation</b>	<b>6</b>
<b>4.</b>	<b>Operation</b>	<b>8</b>
<b>5.</b>	<b>Troubleshooting</b>	<b>9</b>
<b>6.</b>	<b>Replacing the Battery</b>	<b>10</b>
<b>7.</b>	<b>Obtaining Service</b>	<b>13</b>
<b>8.</b>	<b>Specifications</b>	<b>14</b>
<b>9.</b>	<b>Configurable Parameters &amp; Settings</b>	<b>15</b>
<b>10.</b>	<b>Limited Warranty</b>	<b>16</b>



Thank you for purchasing a Minuteman power protection product. It has been designed and manufactured to provide many years of trouble free service.

## **IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS !**

Please read the manual before installing your Pro Series UPS as it provides the information that should be followed during installation and maintenance of the UPS and batteries allowing you to correctly set up your system for the maximum safety and performance.

Included is information on customer support and factory service if it is required. If you experience a problem with the UPS, please refer to the Troubleshooting guide in this manual to correct the problem or collect enough information so that the Minuteman technical support department can rapidly assist you.



**NOTICE:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio interference regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la Class A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.



**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Receiving Inspection

After removing your Minuteman UPS from its carton, it should be inspected for damage that may have occurred in shipping. Immediately notify the carrier and place of purchase if any damage is found. Warranty claims for damage caused by the carrier will not be honored. The packing materials that your UPS was shipped in are carefully designed to minimize any shipping damage. In the unlikely case that the UPS needs to be returned to Minuteman, please use the original packing material. Since Minuteman is not responsible for shipping damage incurred when the system is returned, the original packing material is inexpensive insurance.

### **PLEASE SAVE THE PACKING MATERIALS!**



**WARNING: RISK OF ELECTRICAL SHOCK. HAZARDOUS LIVE PARTS INSIDE THIS POWER SUPPLY ARE ENERGIZED FROM THE BATTERY EVEN WHEN THE AC INPUT POWER IS DISCONNECTED.**

TO DE-ENERGIZE THE OUTPUTS OF THE UPS:

1. IF THE UPS IS ON PRESS THE ON/OFF BUTTON FOR 1 SECOND.
2. DISCONNECT THE UPS FROM THE AC POWER OUTLET.
3. TO DE-ENERGIZE THE UPS COMPLETELY, DISCONNECT THE BATTERY.

**(SEE SECTION 6 FOR INSTRUCTIONS)**



**CAUTION!** TO REDUCE THE RISK OF ELECTRICAL SHOCK IN CONDITIONS WHERE LOAD EQUIPMENT GROUNDING CANNOT BE VERIFIED, DISCONNECT THE UPS FROM THE AC POWER OUTLET BEFORE INSTALLING A COMPUTER INTERFACE CABLE. RECONNECT THE POWER CORD ONLY AFTER ALL SIGNALING CONNECTIONS ARE MADE.



**CAUTION!** CONNECT THE UPS TO A TWO POLE, THREE WIRE GROUNDING AC POWER OUTLET. THE RECEPTACLE MUST BE CONNECTED TO APPROPRIATE BRANCH PROTECTION (CIRCUIT BREAKER OR FUSE). CONNECTION TO ANY OTHER TYPE OF RECEPTACLE MAY RESULT IN A SHOCK HAZARD AND VIOLATE LOCAL ELECTRICAL CODES.

### **Para Systems Life Support Policy**

As a general policy, Para systems Inc. (Para Systems) does not recommend the use of any of its products in life support applications where failure or malfunction of the Para Systems product can be reasonably expected to cause failure of the life support device or to significantly affect its safety or effectiveness. Para Systems does not recommend its products for use in direct patient care. Para Systems will not knowingly sell its products for use in such applications unless it receives in writing assurances satisfactory to Para Systems that (a) the risks of injury or damage have been minimized, (b) the customer assumes all such risks, and (c) the liability of Para Systems Inc. is adequately protected under the circumstances.


Examples of devices considered to be life support devices are neonatal oxygen analyzers, nerve stimulators (whether used for anesthesia, pain relief, or other purposes), auto transfusion devices, blood pumps, defibrillators, arrhythmia detectors and alarms, pacemakers, hemodialysis systems, peritoneal dialysis systems, neonatal ventilator incubators, ventilators for both adults and infants, anesthesia ventilators, and infusion pumps as well as any other devices designated as "critical" by the United States FDA.

Hospital grade wiring devices and leakage current may be ordered as options on many PARA SYSTEMS UPS systems. PARA SYSTEMS does not claim that units with this modification are certified or listed as Hospital Grade by PARA SYSTEMS or any other organization. Therefore, these units do not meet the requirements for use in direct patient care.



**CONTROLS AND INDICATORS**

**FRONT PANEL**

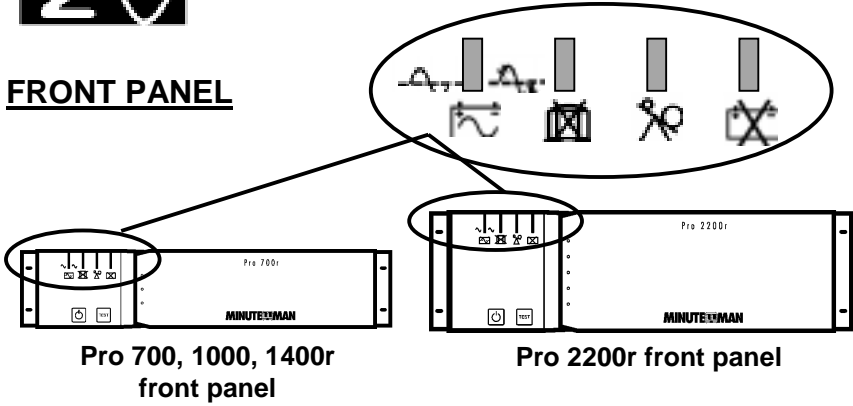

**Pro 700, 1000, 1400r front panel**

**Pro 2200r front panel**




Press and release the ON/OFF button after one beep to turn the unit on or off. (see section 4)



online



on-battery



boost and buck

The online/on battery/boost and buck LED illuminates in a steady state when the UPS is on and supplying AC power to the load, blinks (5 times per second) and sounds the audible alarm when supplying battery power to the load, blinks (once per second) with no audible alarm when the automatic voltage regulator is in operation.



Press and release the TEST/Alarm silence button to test the UPS or silence the alarm.(see section 4)



The fault LED illuminates when the UPS has detected an internal fault (contact Minuteman technical support).




The overload LED illuminates when the loads connected to the UPS exceeds the UPS power rating (see section 4).




The replace battery LED illuminates when the UPS has detected that battery replacement is required (see section 6).

## Pro 700, 1000 and 1400r Rear Panel

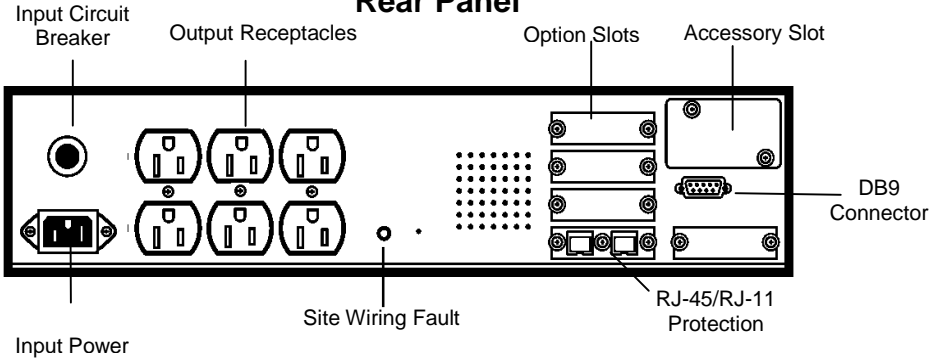

## Pro 2200r Rear Panel

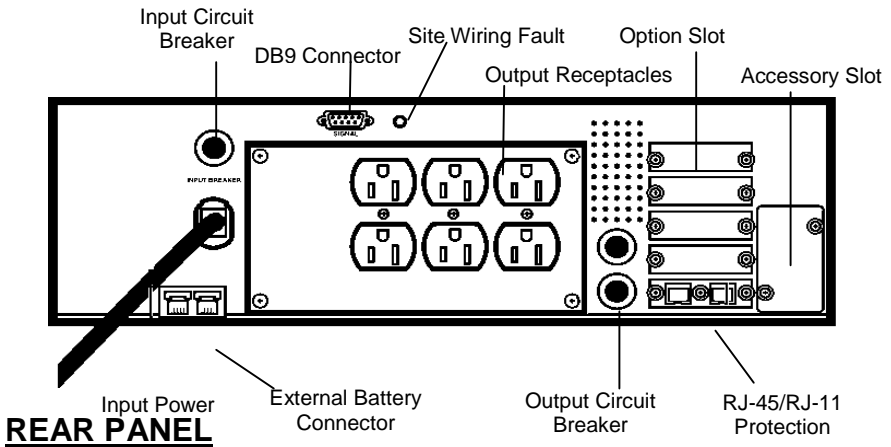

The **Accessory Slot** is used for SNMP UPS monitoring, power control, multiple server support, and special signaling (see section 3).

The **DB9 connector** is used for UPS monitoring and control through a computer's serial port (see section 3).

The **RJ-45/RJ-11** modular connectors are used for 10 Base-T network/single line telephone surge protection (see section 3).

The **Option slots** are for adding extra RJ-45/RJ-11 surge protection cards. Available from Minuteman.

The **Site Wiring Fault LED** illuminates when the UPS detects an improperly wired AC power outlet (only available on 115V models).

The **Output Power** receptacles are NEMA 5-15R type (IEC output sockets on 230Vac models).

The **Input Power** cord has a NEMA 5-15P connector (IEC input socket on 230Vac models, L5-30P for Pro 2200r 115V model).

The **Input Circuit Breaker** will trip in the event the load exceeds the UPS's power rating.

The **Output Circuit Breakers** will trip in the event the load exceeds the UPS's power rating (2200 115V model only).

The **External Battery** connector is for adding more battery capacity to the UPS (see section 3).



## **INSTALLATION PLACEMENT**

Please observe the following items;

- The UPS comes with standard 19" (46.5 cm) rack mount brackets installed. These brackets are reversible for mounting to a standard 23" (59.2 cm) rack.
- Screws are not supplied with the UPS for attaching it to the rack (for screw size varies according to rack size).
- Install the UPS in a temperature controlled, indoor environment that is free of conductive contaminants. Select a location which will provide good air circulation for the UPS at all times. Avoid locations near heating devices, water or excessive humidity, or where the UPS is exposed to direct sunlight. Select a location sturdy enough to handle the weight of the UPS.
- Two additional sets of bracket holes are located on the sides of the UPS to allow for the UPS to be mounted with a different set back. After moving the bracket to these holes, make sure the rack will not tip.
- After mounting is complete, plug the UPS in to a two pole, three wire, grounded receptacle. Route power cords so they cannot be walked on or damaged.



**WARNING:** Care should be taken when installing the units due to their weight. Use two or more people when installing. Do not move the rack after the UPS is installed (the position of the UPS's weight may cause the rack to be unstable during movement).

## **ACCESSORY SLOT (OPTIONAL)**

This slot is used for optional accessories available from Minuteman. Call for more information.

## **DB9 CONNECTOR**

Minuteman Power Management software and interface cables kits are used with this port (software and cables are optional and available from Minuteman). Use only Minuteman or Minuteman approved interface cables with these UPS's. Connect the interface cable to the DB9 connector on the rear of the UPS. Secure the connector to the UPS via the screws on the connector housing. Connect the other end of the cable to the device that will be monitoring/controlling the UPS.

**NOTE: CONNECTING TO THE DB9 IS OPTIONAL. THE UPS WORKS PROPERLY WITHOUT A CONNECTION.**

## **RJ-45/RJ-11 PROTECTION**

Connect a single line telephone or a 10 Base-T network line to the protection sockets on the rear of the UPS. This connection will require another length of telephone or network cable. The cable coming from the telephone service or networked system is connected to the port marked "IN". The port marked "OUT" is connected to the equipment to be protected.

**NOTE: CONNECTING TO THIS PORT IS OPTIONAL. THE UPS WORKS PROPERLY WITHOUT A CONNECTION.**

## **SITE WIRING FAULT** (115V models only)

After plugging in the UPS, check the site wiring fault (SWF) LED on the rear of the unit. If the LED is illuminated, the UPS is plugged into an improperly wired AC outlet.



**CAUTION!: IF THE UPS INDICATES A SITE WIRING FAULT, HAVE A QUALIFIED ELECTRICIAN CORRECT THE PROBLEM.**

## **EXTERNAL BATTERY CONNECTOR**

This is an option that is only available on the 2200VA UPS. This is an optional connection for this UPS. The 2200 has internal batteries. The battery pack is available from Minuteman (PRO BP1). Only one battery pack may be connected to the UPS to extend its runtime. Use only the Pro BP1 battery pack with this UPS. The use of any other battery pack may damage the UPS and void the warranty.

## **CHARGING THE BATTERIES**

The PRO Series UPS's will charge the batteries whenever the unit is connected to an AC source. It is recommended that the UPS batteries be charged for a minimum of 4 hours before use. The UPS may be used immediately. However, the "on battery" run time may be less than normally expected.

## **CONNECTING YOUR EQUIPMENT**

Plug the equipment into the receptacles on the rear of the unit. Insure that you do not exceed the maximum output rating of the UPS (refer to the back panel of the UPS or the electrical specifications in this manual).



**CAUTION! DO NOT CONNECT A LASER PRINTER TO THE UPS UNLESS THE UPS IS RATED 2000VA OR GREATER. A LASER PRINTER DRAWS SIGNIFICANTLY MORE POWER WHEN PRINTING THAN AT IDLE AND MAY OVERLOAD THE UPS.**



## TURNING THE UNIT ON/OFF

### ON/OFF SWITCH



Press and release the ON/OFF switch after one beep to turn the unit on and supply power to the load. The load will be immediately powered and 2 seconds later the UPS will run a 15 second self test before returning the load to the AC line. Press and release the switch again to turn the UPS off. The UPS will continue to charge the batteries whenever it is plugged in and AC line is present.

### SELF TEST

TEST

### TEST SWITCH

The self test feature is useful to verify the correct operation of the UPS and the condition of the battery. With the UPS plugged into normal AC, press and release the TEST/Alarm silence switch to initiate a self test. When the UPS is in battery mode, press and release the TEST/Alarm silence switch to silence the alarm.

**NOTE: The UPS will automatically perform a self test on startup and every two weeks.**

During the self test the UPS will switch to battery power and the on-line LED will blink and the audible alarm will sound as well. This test will run for approximately fifteen seconds to measure the battery's capability to provide an acceptable amount of runtime. If the UPS fails a self test, one of the LED's will remain illuminated indicating the type of problem (see section 5 Troubleshooting).

## ALARMS

### ON BATTERY

When the UPS is operating on the batteries, the on-line LED will blink and the audible alarm will sound every 10 seconds. The alarm will stop once the UPS returns to on-line operation.

### UPS FAULT

When the UPS detects a hardware fault, the fault LED will illuminate and the UPS will emit a sustained tone. The fault condition can be re-set by turning the UPS off and then on or by pressing the test switch (see section 5 for more information).

### OVERLOAD

When the amount of load attached to the UPS exceeds its power rating, the overload LED will illuminate and the UPS will emit a sustained tone. This alarm will remain on until the excess load is removed or the UPS's self protection circuit shuts the UPS down.

### REPLACE BATTERY

The UPS automatically tests the battery's condition and will illuminate the replace battery LED and emit a short beep. This tone will be repeated every hour until the battery passes a self test. It is recommended that the UPS be allowed to charge overnight before performing a battery test to confirm a replace battery condition.


### LOW BATTERY WARNING

The UPS will emit a steady tone when the battery reserve runs low. It continues to emit the steady tone until AC returns or the UPS shuts down from battery exhaustion.



## TROUBLESHOOTING CHART

Symptom	Possible Cause	What To Do
UPS will not turn on	On/Off button not pushed	Press On button momentarily (one beep) to start UPS
UPS operates in battery mode only, even though there is normal AC present	Input AC breaker is tripped	Reset circuit breaker by pressing the plunger back in. Circuit breaker trips after UPS starts up, reduce the load on the UPS
Fault LED is illuminated	UPS has detected an internal fault	Call for service
The Site Wiring Fault LED is illuminated	Incorrect service wiring	Have a qualified electrician correct the service wiring
The Online/On Battery LED is illuminated, but there is no output	The UPS is being controlled via its communications port	Disconnect the communications cable from the UPS and press the On button momentarily. If the UPS works normally, software has control of the UPS
UPS does not provide expected backup time	The batteries may be weak or at the end of useful service life	Charge the batteries for 8 hours and retest. If the backup time is still less than expected, the batteries may need to be replaced, even though the Replace Battery LED is not illuminated
Replace Battery LED is illuminated	Weak or bad batteries, or bad battery connection	Check the battery connection and/or replace the batteries. Follow battery replacement procedures in Section 6
The UPS occasionally emits a beep	Normal operation	The UPS is performing its intended function

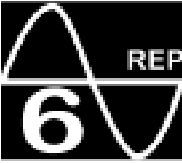

## REPLACING THE BATTERY

### REPLACING THE BATTERY

The PRO Series UPS has an easy to replace hot-swappable batteries. Please read the following warning statements before attempting to service the batteries.



**WARNING!** THIS UNINTERRUPTIBLE POWER SOURCE CONTAINS POTENTIALLY HAZARDOUS VOLTAGES. DO NOT ATTEMPT TO DISASSEMBLE THE UNIT BEYOND BATTERY REPLACEMENT PROCEDURES BELOW. EXCEPT FOR THE BATTERY, THIS UPS CONTAINS NO USER SERVICABLE PARTS. REPAIRS CAN BE PERFORMED BY MINUTEMAN SERVICE PERSONNEL ONLY.

**CAUTION:** DO NOT OPEN OR MUTILATE BATTERIES. RELEASED ELECTROLYTE IS HARMFUL TO THE SKIN AND EYES AND MAY BE TOXIC

**CAUTION:** DO NOT DISPOSE OF BATTERIES IN A FIRE. THE BATTERIES MAY EXPLODE.



THE BATTERIES IN THIS UPS ARE RECYCLABLE. DISPOSE OF THE BATTERIES PROPERLY. THE BATTERIES CONTAIN LEAD AND POSE A HAZARD TO THE ENVIRONMENT AND HUMAN HEALTH IF NOT DISPOSED OF PROPERLY. REFER TO LOCAL CODES FOR PROPER DISPOSAL REQUIREMENTS OR RETURN THE BATTERY TO MINUTEMAN.



**CAUTION:** ALTHOUGH BATTERY SYSTEM VOLTAGES ARE ONLY 24 VDC AND 48 VDC, THE BATTERY SYSTEM CAN STILL PRESENT A RISK. THE CURRENT CAPABILITY OF A BATTERY IS SUFFICIENT TO BURN WIRE OR TOOLS VERY RAPIDLY, PRODUCING MOLTEN METAL. OBSERVE THESE PRECAUTIONS WHEN REPLACING THE BATTERIES:

1. REMOVE WATCHES, RINGS, OR OTHER METAL OBJECTS;
2. USE HAND TOOLS WITH INSULATED HANDLES;
3. DO NOT LAY TOOLS OR OTHER METAL PARTS ON TOP OF BATTERIES



**CAUTION:** WHEN DISCONNECTING THE INTERNAL BATTERIES OR THE EXTERNAL BATTERY PACK, THE UPS CANNOT BE RUNNING IN THE BATTERY MODE. THE UPS MUST BE OFF OR SUPPLYING POWER TO THE LOAD FROM THE UTILITY MAINS.


**CAUTION:** REPLACE BATTERIES WITH THE SAME NUMBER AND TYPE AS ORIGINALLY INSTALLED IN THE UPS. THESE BATTERIES HAVE PRESSURE OPERATED VENTS.

## BATTERY REPLACEMENT PROCEDURE

**PLEASE READ THE PREVIOUS “CAUTIONS” SECTION BEFORE ATTEMPTING TO REPLACE THE BATTERIES**

Battery replacement is a safe procedure when cautions and instructions are carefully followed. You may leave the UPS and the loads on for the following procedure.

### 700, 1000 and 1400VA Models

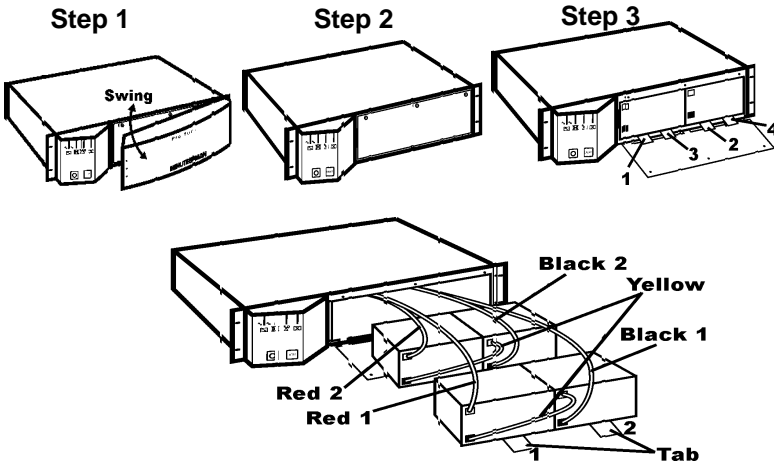

1. **Step 1** Reach into the finger pull on the front of the UPS and open the front cover. Swing the cover open as shown and remove.
2. Use a screwdriver to remove the battery door screws and open the door.
3. Disconnect the battery leads in the following order. **Red wire first. Yellow jumper wire second and Black wire last.** Loosen the connectors by gently wiggling them while pulling to the right of the battery connector. **NOTE:** Note the connections between the batteries, so proper connections are made when installing the new batteries.
4. Grasp the battery tabs in numerical order and gently pull each battery out one at a time. For models with four batteries, repeat step 3 for the rear batteries. **NOTE:** The red and black wire will need to be moved to the right side of the opening so the left battery can be removed and to the left side of the opening so the right battery can be removed. **NOTE:** Be careful when removing the batteries since they are heavy.
5. Install the new batteries by placing the right battery in first followed by the left (reversing the order from which they were removed). As in step 4, the red and black wire will need to be moved to the left side of the opening so the right battery can be installed and to the right side of the opening so the left battery can be installed. **Connect the battery leads to the new battery as shown in the following order.** Connect the **BLACK** wire to the negative (-) terminal **first**. Then connect the **Yellow** jumper wire between the batteries. The **RED** wire is the **last** connection. Connect the **RED** wire to the positive (+) terminal.


**NOTE:** Small sparks at the battery connection are normal during battery connection. Close the door, replace the battery compartment screws, and replace the front cover.

6. Dispose of the battery at an appropriate recycling facility or return it to Minuteman in the packing material from the new battery kit.


### 2200VA Model





**Step 1**

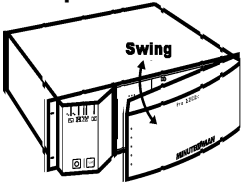

**Step 2**

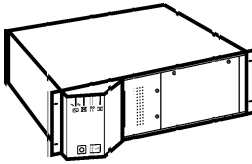

**Step 3**

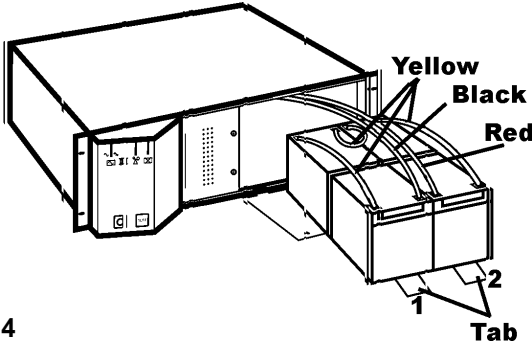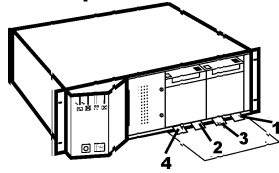

**Step 4**

1. Reach into the finger pull on the front of the UPS and open the front cover. Swing the cover open as shown and remove.
2. Use a screwdriver to remove the battery door screws and open the door.
3. Disconnect the battery leads in the following order. **Red wire first. Black wire second** and the **Yellow** jumper wires **last**. Loosen the connectors by gently wiggling them while pulling straight back from the battery connector. NOTE: Note the connections between the batteries, so proper connections are made when installing the new batteries.
4. Grasp the battery tabs in numerical order and gently pull each battery out one at a time. After the front batteries are removed, grasp the two remaining battery tabs and pull the rear batteries out together. NOTE: Be careful when removing the batteries since they are heavy.
5. Remove the Yellow jumpers from the old batteries and install them on the new batteries.
6. Install the new batteries in reverse order of removal. When making the final wire connection, connect the **Yellow** jumper wires **first**. **Then** connect the **BLACK** wire to the negative (-) terminal. The **RED** wire is the **last** connection. Connect the RED wire to the positive (+) terminal. NOTE: Small sparks at the battery connection are normal during battery connection. Close the door, replace the battery compartment screws, and replace the front cover.
7. Dispose of the battery at an appropriate recycling facility or return it to Minuteman in the packing material from the new battery kit.



## IF THE UPS REQUIRES SERVICE


1. Use the **TROUBLESHOOTING** section 5 to eliminate obvious causes.
2. Verify that no circuit breakers are tripped. A tripped circuit breaker is the most common problem.
3. Call your dealer for assistance. If you cannot reach your dealer, or if he cannot resolve the problem, call or FAX Minuteman Technical Support at the following numbers: Voice phone (972) 446-7363, FAX line (972) 446-9011, e-mail: support@minuteman-ups.com. Please have the following information available BEFORE calling technical support.
  - A. Your Name and address.
  - B. Where and when the unit was purchased.
  - C. All of the model information on the rear of your Pro Series UPS.
  - D. Any information on the failure, including LEDs that may be illuminated.
  - E. A description of the protected equipment, including model numbers if possible.
  - F. A technician will ask you for the above information and, if possible, help solve your problem over the phone. In the event that the unit requires factory service, the technician will issue you a Return Material Authorization Number (RMA #).
  - G. If the UPS is under warranty, the repairs will be done at no charge. If not, there will be a charge for repair.
4. Pack the UPS in its original packaging. If the original packaging is no longer available, ask the technical support technician about obtaining a new set. It is important to pack the UPS properly in order to avoid damage in transit. Never use Styrofoam beads for a packing material. Include a letter with your name, address, day time phone number, RMA number, a copy of your original sales receipt, and a brief description of the trouble.
5. Mark the RMA # on the outside of all packages. The factory cannot accept any package without the RMA # marked on the outside.
6. Return the UPS by insured, prepaid carrier to:

Minuteman, Para Systems Inc.  
1455 LeMay Drive  
Carrollton, Tx. 75007


**SPECIFICATIONS**

NOTE: 230V Specs Shown in ( )	Pro 700r	Pro 1000r	Pro 1400r	Pro 2200r
Nominal input voltage	115V (230V)	115V (230V)	115V (230V)	115V (230V)
*Acceptable input voltage	92-150 (176-282)	92-150 (176-282)	92-150 (176-282)	92-150 (176-282)
*Output voltage (on-line operation)	103V-131V (196V-253V)	103V-131V (196V-253V)	103V-131V (196V-253V)	103V-131V (196V-253V)
Output voltage (Battery operation)	Nominal voltage $\pm 5\%$ , -10% after low battery warning. Simulated sine wave			
Nominal input frequency	50 or 60Hz, autosensing			
Frequency limits(on-line)	50 or 60 Hz +/- 3 Hz			
Frequency (Battery operation)	50 or 60 Hz +/- 1 Hz			
Input protection	Resettable circuit breaker			
Transfer time	4 ms typical			
Maximum load VA/Watts	700VA/450W	1000VA/670W	1400VA/950W	2200VA/1600W
Protection	Overcurrent and short-circuit protected, latching shutdown on overload			
Surge energy rating(one time, 10 to 1000 us waveform)	480 Joules			
Surge current capability (one time, 8 to 20 us waveform)	6500 A maximum			
Surge response time	0 ns (instantaneous) normal mode, <5ns common mode			
Surge voltage let-through	< 0.3 % of peak, typical			
Noise filter	Normal and common mode EMI/RFI suppression, 100 kHz to 10 MHz			
Battery Type	Hot-swappable, Spill-proof, sealed lead acid, maintenance-free			
Typical battery life	3 to 5 years			
Typical recharge time	4 hours			
10 Base-T surge protection let-through	<5% (As a percentage of an applied $\pm 6kV$ 1.2/50 $\mu s$ , 500A 8/20 $\mu s$ test)			
Telephone line surge protection let-through	1% (As a percentage of an applied $\pm 6kV$ 1.2/50 $\mu s$ , 500A 8/20 $\mu s$ test)			
Operating temperature	0 to +40 degrees C (+32 to 104 degrees F)			
Storage temperature	-15 to +45 degrees C (+5 to +113 degrees F)			
Operating and storage relative humidity	0 to 95% non-condensing			
Operating elevation	0 to +3000 m (0 to +10,000 ft)			
Electromagnetic immunity	IEC 801-2 level IV, 801-4 level IV, 801-5 level III			
Audible noise in dbA at 1 meter	< 45			
Audible alarm	On Overload, Low battery warning, On battery			
Communications port	DB-9 Minuteman standard, optional SNMP			
Size (H x W x D)	8.9 X 48.3 X 45.3 cm (3.5 X 19.0 X 17.8 in)		13.2 X 48.3 X 50.4 cm (5.2 X 19.0 X 19.8 in)	
Weight net (shipping)	19.8 (22.1) Kg 43.6 (48.6) Lb	26.6 (28.9) Kg 58.6 (63.6) Lb	29.7 (32.0) Kg 65.4 (70.4) Lb	46.4 (49.1) Kg 102 (108) Lb
Battery pack	Available on the 2200 only (Pro BP1)			
Battery pack size (HxWxD) and weight	8.9 X 48.3 X 45.3 cm (32.1 Kg) 3.5 X 19.0 X 17.8 in (70.7 Lb)			
Conformance	UL 1778, CSA C22.2, FCC Class A, TUV/GS, CE, EN50091-1, EN50091-2, EN60950, EN50082-1, EN55022, EN61000-3-2 & EN61000-3-3			


\*Note: The input voltage range is adjustable via software. For input voltages less than 8% or more than 12% of nominal, the voltage regulator will boost or reduce the input voltage by 15%.

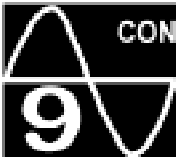

## CONFIGURABLE PARAMETERS AND SETTINGS

NOTE: These items require optional software or hardware.

Function	Factory Default	User Choices	Description
UPS ID	Model number	Up to 64 characters to define the UPS	Use this function to uniquely identify the UPS in your network configuration
Battery install date	Date of manufacture	Date of battery replacement - day/month/year XX/XX/XXXX	Enter the current date when replacing batteries
Battery life in days	1826	Up to 5 characters	At first battery replacement, reset to reflect actual number of days experience in your environment or leave factory default.
Enable/Disable auto restart	Enabled	Enable or disable	When <u>enabled</u> , the UPS will automatically restart from a low battery shutdown when normal A/C returns
Set audible alarm state	Enabled	Enabled, at low battery, disabled, Mute	<u>Enabled</u> - the UPS will emit a short beep when in the battery mode. <u>At Low Battery</u> the UPS will emit a steady tone only at low battery warning through shutdown. <u>Disabled</u> - Use only when software is controlling the UPS or to silence the alarm <u>Mute</u> - Attenuates the alarm by 50%
Shutdown Type	UPS output	UPS output or UPS	<u>UPS Output</u> - When the UPS is told to shut down, it turns off the UPS output only. <u>UPS</u> - Turns off the UPS which requires the UPS to be turned on manually
Set low voltage Xfer point	92 VAC (176 for 230VAC models)	92 or 88 VAC (176 or 166 for 230VAC models)	Changes the voltage point at which the UPS switches to battery power
Set high voltage Xfer point	150 VAC (282 for 230VAC models)	150 or 145 VAC (282 or 272 for 230VAC models)	Changes the voltage point at which the UPS switches to battery power
Set nominal input voltage	115 VAC (230 for 230VAC models)	110,115,120 VAC (220, 230, 240 for 230VAC models)	Changes the output voltage
Baud Rate	9600	1200, 2400, 4800, 9600	Sets the communication baud rate

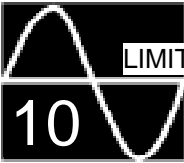

## LIMITED PRODUCT WARRANTY

### LIMITED PRODUCT WARRANTY

Para Systems Inc. (Para Systems) warrants this equipment, when properly applied and operated within specified conditions, against faulty materials or workmanship for a period of three years from the date of original purchase by the end user. For equipment sites within the United States and Canada, this warranty covers repair or replacement of defective equipment at the discretion of Para Systems. Repair will be from the nearest authorized service center. Replacement parts and warranty labor will be borne by Para Systems. For equipment located outside of the United States and Canada, Para Systems only covers faulty parts. Para Systems products repaired or replaced pursuant to this warranty shall be warranted for the unexpired portion of the warranty applying to the original product. This warranty applies only to the original purchaser who must have properly registered the product within 10 days of purchase.

The warranty shall be void if (a) the equipment is damaged by the customer, is improperly used, is subjected to an adverse operating environment, or is operated outside the limits of its electrical specifications; (b) the equipment is repaired or modified by anyone other than Para Systems or Para Systems-approved personnel; or (c) has been used in a manner contrary to the product's operating manual or other written instructions.

Any technical advice furnished before or after delivery in regard to use or application of Para Systems' equipment is furnished without charge and on the basis that it represents Para Systems' best judgment under the circumstances, but it is used at the recipient's sole risk.

EXCEPT AS PROVIDED HEREIN, PARA SYSTEMS MAKES NO WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Some states do not permit limitation of implied warranties; therefore, the aforesaid limitation(s) may not apply to the purchaser.

EXCEPT AS PROVIDED ABOVE, IN NO EVENT WILL PARA SYSTEMS BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF THIS PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. Specifically, Para Systems is not liable for any costs, such as lost profits or revenue, loss of equipment, loss of use of equipment, loss of software, loss of data, cost of substitutes, claims by third parties, or otherwise. The sole and exclusive remedy for breach of any warranty, expressed or implied, concerning Para Systems' products and the only obligation of Para Systems hereunder, shall be the repair or replacement of defective equipment, components, or parts; or, at Para Systems' option, refund of the purchase price or substitution with an equivalent replacement product. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Longer term and F.O.B. job site warranties are available at extra cost. Contact Para Systems (1-972-446-7363) for details.

## DECLARATION OF CONFORMITY

Application of Council Directive(s): 89/336/EEC, 73/23/EEC

Standard(s) to which Conformity is Declared: EN50091-1, EN50091-2  
EN50082-1, EN55022, EN60950, EN61000-3-2, EN61000-3-3

Manufacturer's Name: Para Systems, Inc. (Minuteman Power Supplies)  
Manufacturer's Address: 1455 LeMay Drive  
Carrollton, Texas 75007 USA

Type of Equipment: Uninterruptible Power Supplies

Model No: Pro 700ri, Pro 1000ri, Pro 1400ri, Pro 2200ri

Year of Manufacture: 1998,

I, the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s).

Place: Carrollton, Tx USA

Shawn Delavar

(Signature)

Date: November 1, 1998

Shawn Delavar  
(Full Name)

Regulatory Compliance Engineer

**MINUTE MAN<sup>®</sup>**  
UNINTERRUPTIBLE POWER SUPPLIES

**Para Systems, Inc.  
1455 LeMay Dr.  
Carrollton, TX 75007  
Phone: (972) 446-7363  
Fax: (972) 446-9011  
QuickFax Info System: 1-800-263-3933  
Internet: [www.minuteman-ups.com](http://www.minuteman-ups.com)**

**PN: 34000033  
Rev. 1**